




Dell Latitude ST Battery Replacement

Replace your tablet's battery so your device will power on.

Written By: Chelsea Phillips

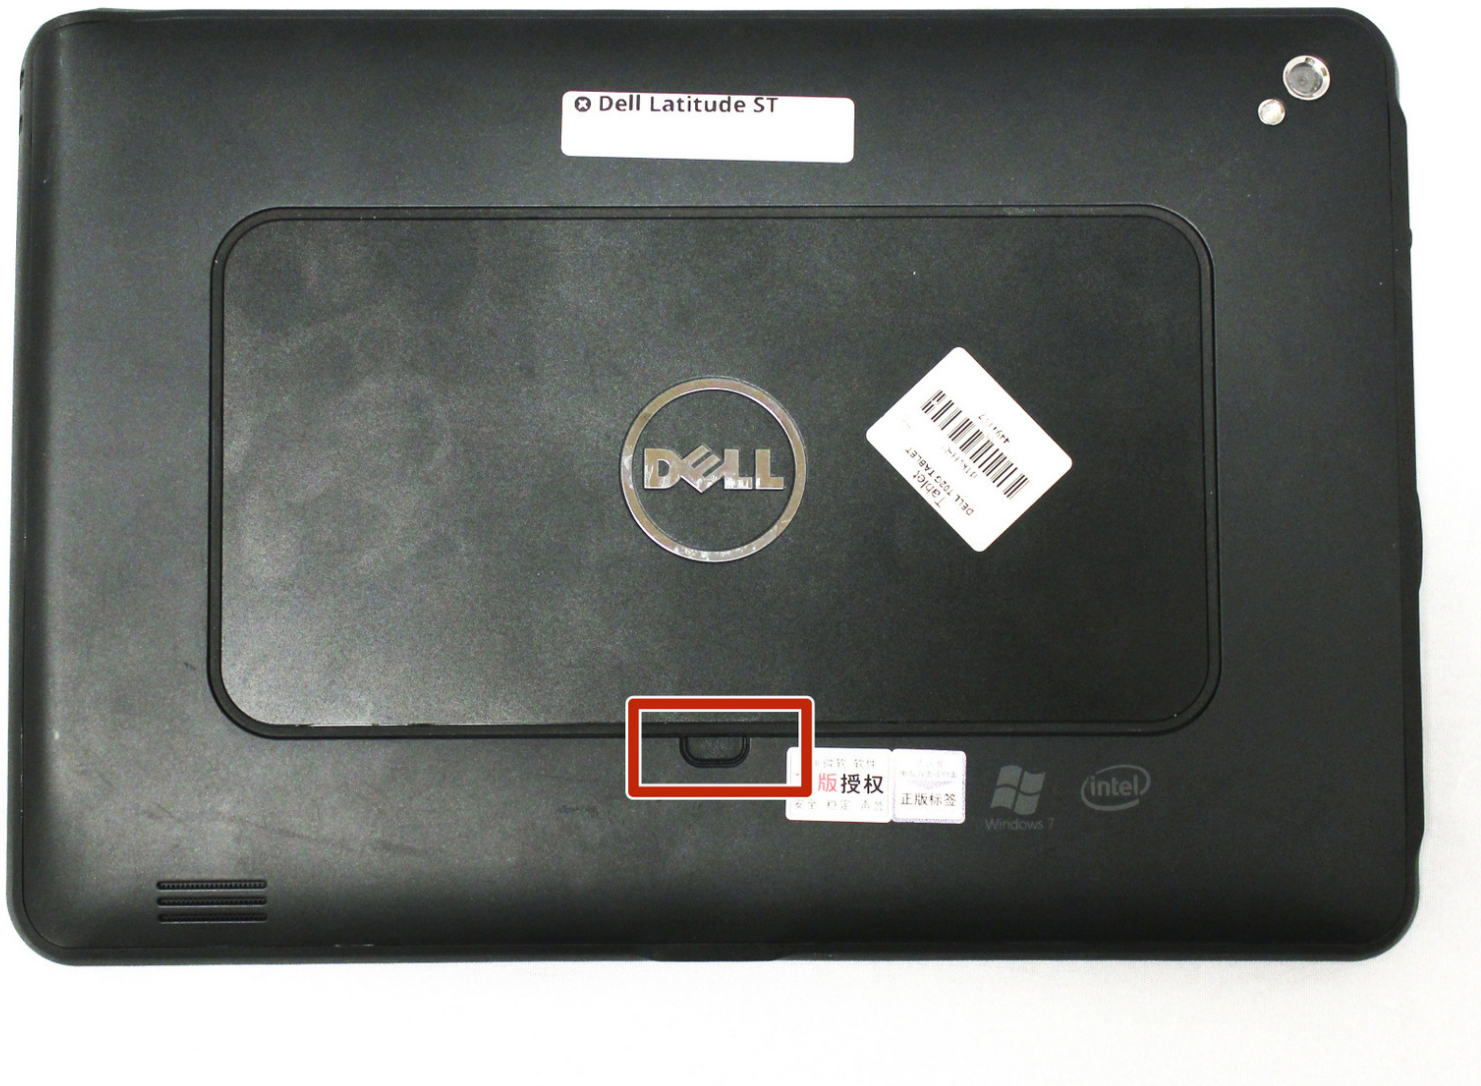

INTRODUCTION

If your Dell latitude ST is not powering on it may have a dead battery, or a broken power cord. If your battery still does not hold a charge you will need to replace your battery. This guide walks you through each step of how to replace the battery on your Dell Latitude ST if it is broken.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Locate the back panel tab.
- Press down on the tab to remove the panel.

Step 2



- Using a Phillips #0 screwdriver, remove the four 6mm screws attaching the inside panel to the device.

Step 3



- Use the blue plastic opening tool to push in the tab located on the backside of the device.
- Slide the tool around the edges of the device to unsnap the tabs and pry the frame off.

Step 4



- Remove the three 6mm Phillips #0 screws attaching the battery.

Step 5



- Using your hands or a plastic opening tool, unplug the white battery cable.

⚠ Push forward on the top part of the cable to disconnect it from the device.

Step 6



- Pull up on the black tab located at the top of the battery to remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-02 08:01:55 PM.